



PONY

Pony Testing International Group

报告编号(Report ID): MPI0G8AL328617U5



中国认可
国际互认
检测
TESTING
CNAS L3192

UN38.3 测试报告

UN38.3 Test Report

样品名称及型号

锂离子电池 型号: 38131

Sample Name &
Model

Li-ion Battery Model: 38131
(14.4V 6700mAh 96Wh)

委托单位

东莞嘉志电子科技有限公司

Applicant

Dongguan Jiazhi Electronic Technology Co., Ltd

生产单位

东莞嘉志电子科技有限公司

Manufacturer

Dongguan Jiazhi Electronic Technology Co., Ltd

P O N Y 谱尼测试
Pony Testing International Group
www.ponytest.com



No.: MPI0G8AL328617U5
Code: cvirx4yw

声 明 Statement

1. 本报告仅对委托方所送样品负责。
The report is responsible for the provided sample only.
2. 本报告页面所使用“PONY”、“谱尼”字样为本单位的注册商标,其受《中华人民共和国商标法》保护,任何未经本单位授权的擅自使用和仿冒、伪造、变造“PONY”、“谱尼”商标均为违法侵权行为,本单位将依法追究其法律责任。
The pattern and characters of "PONY" and "谱尼" used in this report are protected by the trademark law of the People's Republic of China. Any unauthorized usage, counterfeit, forgery and alteration of trademarks of "PONY" and "谱尼" are the violations of the law. The PONY has the right to pursue all legal liabilities of the subject of the delict.
3. 委托方必须如实提供样品及资料,并保证申报品名和样品以及运输货物相同,否则本单位不承担任何相关责任。
The applicant shall provide accurately and truly the sample and the description of the sample, shall guarantee the declared sample's name to match with the sample and transport of goods. Otherwise PONY will not bear any relevant responsibility.
4. 本报告经审核人、批准人签字并加盖印章后生效。
This report shall become effective as soon as it reviewed by the checker and signed by the approver and stamped.
5. 委托方对报告数据如有异议,请于报告完成之日起十五日内向本单位书面提出复测申请,同时附上报告原件并预付复测费。
If the applicant has any objection about the results of the report, shall provide a written re-test application and simultaneously attach the original report and pay the retest fees in advance within fifteen days since the approval date of the report.
6. 不可重复性或不能进行复测的实验,不进行复测,委托方放弃异议权利。
Tests that can not be repeated and tested shall not be perform the retest, the applicant shall abandon the right of any objection.
7. 本报告私自转让、盗用、冒用、涂改、未经本单位批准的复制(全文复制除外)或以其它任何形式的篡改均属无效,本单位将对上述行为追究其相应的法律责任。
The report is invalid in case of illegal transfer, embezzlement, imposture, modification or any altering, reproducing except in full, without approval of PONY. PONY shall investigate and affix the applicant's legal liability accordingly.
8. 本报告不考虑国家及经营者差异。
The certificate/report takes no account of the differences of countries and applicants.
9. 本报告中的运输方式应与货物的运输方式相一致,不同的运输方式,结果可能会有差异。
The transport means of goods should be as the same as that declared in the report, as in case of different transport means of goods the results may be different.

▲ 防伪说明:

- (1) 报告编号是唯一的;
- (2) 报告采用特制防伪纸张印制,纸张表面带有“PONY”防伪纹路,该防伪纹路不支持复印,即复制件不会带有“PONY”防伪纹路;
- (3) 报告采用的防伪纸张内部亦加带有高科技“PONY”防伪水印,只有在验钞机等紫外线照射下方可显出无色荧光防伪字样;
- (4) 报告所盖防伪骑缝章中的一部分加盖于本单位的留底报告上,报告与本单位留底报告的骑缝章应拼合完整无缺。



全国服务热线
400-819-5688

WWW.PONYTEST.COM



集团微信订阅号 集团微信服务号

北京实验室:(010)83055000
北京医学实验室:(010)62450233转8010
北京谱尼科技公司:(010)80415661
上海实验室:(021)64851999
上海医学实验室:(021)37895599
上海松江实验室:(021)37895599
青岛实验室:(0532)88706866
青岛医学实验室:(0532)88706866
深圳实验室:(0755)26050909
深圳医学实验室:(0755)26050909

武汉实验室:(027)85446975
武汉车附所:(027)82318175
武汉医学实验室:(027)85446975
吉林医学实验室:(0431)80529700
长春实验室:(0431)80530198
大连实验室:(0411)87336618
大连医学实验室:(0411)87336618
哈尔滨实验室:(0451)58627755
黑龙江医学实验室:(0451)58603455
苏州医学实验室:(0512)62997900

新疆实验室:(0991)6684186
石家庄实验室:(0311)85376660
西安实验室:(029)89608785
杭州实验室:(0571)87219096
杭州医学实验室:(0571)87219096
宁波实验室:(0574)87977185
天津实验室:(022)23607888
天津医学实验室:(022)23607888
成都实验室:(028)87702708
南宁实验室:(0771)5518818

太原实验室:(0351)7555722
合肥实验室:(0551)63843474
广州实验室:(020)89224310
厦门实验室:(0592)5568048
内蒙古医学实验室:(0471)3450025
呼和浩特实验室:(0471)3450025
贵州实验室:(0851)85221000
郑州实验室:(0371)69350670
郑州协力润华医学实验室:
(0371)63279066



Pony Testing International Group

I、样品描述 Sample Description

样品名称 Sample name	锂离子电池 Li-ion Battery	样品型号 Sample model	38131
委托单位 Applicant	东莞嘉志电子科技有限公司 Dongguan Jiashi Electronic Technology Co., Ltd		
生产商 Manufacturer	名称 Name	东莞嘉志电子科技有限公司 Dongguan Jiashi Electronic Technology Co., Ltd	
	地址 Address	中国广东省东莞市塘厦镇石鼓村宏源路 1 号 No.1 Hong Yuan Road, Shigu Village, Tangxia Town, Dongguan City, Guangdong Province P.R.China	
	电话 Tel.	13480469126	
	邮箱 E-mail	yang_fen@siil.com.cn	
	网址 Website	www.sunstrong.com	
标称电压 Nominal voltage	14.4V	额定容量 Rated capacity	6700mAh
充电电流 Charge current	2000mA	最大连续充电电流 Maximum continuous charge current	2200mA
充电限制电压 Limited charge voltage	18V	充电截止电流 End charge current	150mA
放电终止电压 Discharge Cut-off voltage	11V	最大放电电流 Maximum discharge current	6800mA
放电电流 Discharge current	6000mA	质量 Mass	525.10g
电池芯生产厂家 Manufacturer of cell	郑州比克电池有限公司 Zhengzhou BAK Battery Co., Ltd.		
电池芯型号 Cell model	N18650CP	电池芯个数 Cell number	8PCS
电池芯标称电压 Cell nominal voltage	3.6V	电池芯额定容量 Cell rated capacity	3350mAh
委托日期 Entrust date	2021-10-21	完成日期 Finished date	2021-11-10

II、测试标准 Test Standard

《试验和标准手册》第七修订版第III部分 38.3 章节

Manual of Tests and Criteria (ST/SG/AC.10/11/Rev.7 Part III sub-section 38.3)



Pony Testing International Group

No. MPI0G8AL328617U5 第2页, 共16页 (Page 2 of 16)

III、测试项目及结论 Test Item & Conclusion

测试项目 Item	测试样品编号 Sample Number	结论 Conclusion
T.1 高度模拟 Altitude simulation	N1~N4 C1~C4	通过 PASS
T.2 温度试验 Thermal test		通过 PASS
T.3 振动 Vibration		通过 PASS
T.4 冲击 Shock		通过 PASS
T.5 外部短路 External short circuit		通过 PASS
T.6 撞击 Impact	N5~N9 C5~C9	通过 PASS
T.7 过度充电 Overcharge	N1~N4 C1~C4	通过 PASS
T.8 强制放电 Forced discharge	N10~N19 C10~C19	通过 PASS

经测试, 该样品符合《试验和标准手册》(ST/SG/AC.10/11/Rev.7), 第 III 部分 38.3 章节要求。
The Samples has passed the test items of Manual of Tests and Criteria (ST/SG/AC.10/11/Rev.7), Part III sub-section 38.3.

说明 Notes

- N1~N4 为第一个充放电周期完全充电状态的电池组
Batteries at first cycle in fully charged states
- N5~N9 为第一个充放电周期 50%设计额定容量状态的电池芯
Cells at first cycle at 50% of the design rated capacity
- N10~N19 为第一个充放电周期完全放电状态的电池芯
Cells at first cycle in fully discharged states
- C1~C4 为 25 个充放电周期后完全充电状态的电池组
Batteries after 25 cycles ending in fully charged states
- C5~C9 为 25 个充放电周期 50%设计额定容量状态的电池芯
Cells after 25 cycles at 50% of the design rated capacity
- C10~C19 为 25 个充放电周期后完全放电状态的电池芯
Cells after 25 cycles ending in fully discharged states

主检

白志画

Tested by:

审核

周物勃

Checker by:

批准

张同

Approver by:

签发日期 Issue date 2021-11-10

PONY 谱尼测试
Pony Testing International Group

Hotline 400-819-5688 www.ponytest.com


谱尼测试集团深圳有限公司
地址: 深圳市宝安区福海街道桥头社区永和路鑫泰盛工业园 1 栋、2 栋 3 层
电话: 0755-26050909

北京实验室:(010)83055000 哈尔滨实验室:(0451)58627755 内蒙古医学实验室:(0471)3591511 武汉实验室:(027)83997127
北京医学实验室:(010)62450233-8010 黑龙江医学实验室:(0451)58603455 太原实验室:(0351)7555722 武汉医学实验室:(027)85446975
北京谱尼科技公司:(010)80415661 郑州实验室:(0371)69350670 成都实验室:(028)87702708 杭州实验室:(0571)87219096
青岛实验室:(0532)88706866 郑州谱尼医学实验室:(0371)63279066 贵州实验室:(0851)85221000 杭州医学实验室:(0571)87219096
青岛医学实验室:(0532)88706866 新疆实验室:(0991)6684186 上海实验室:(021)64851999 宁波实验室:(0574)87977185
天津实验室:(022)23607888 石家庄实验室:(0311)85376660 上海医学实验室:(021)64851999 合肥实验室:(0551)63843474
天津医学实验室:(022)23607888 西安实验室:(029)89608785 苏州实验室:(0512)62997900 深圳实验室:(0755)26050909
长春实验室:(0431)80530198 西安创尼实验室:(029)81123093 苏州汽车安全带及儿童安全座椅 碰撞实验室:(0512)62997900 深圳医学实验室:(0755)26050909
吉林医学实验室:(0431)80529700 西安德威实验室:(029)62886819 广州实验室:(020)89224310
大连实验室:(0411)87336618 西安医学实验室:(029)89608785 苏州医学实验室:(0512)62997900 南宁实验室:(0771)5518818
大连医学实验室:(0411)87336618 呼和浩特实验室:(0471)3450025 武汉车管所:(027)82318175 厦门实验室:(0592)5568048



IV、样品照片 Photo of The Sample

样品编号/Sample No.: L328617U5

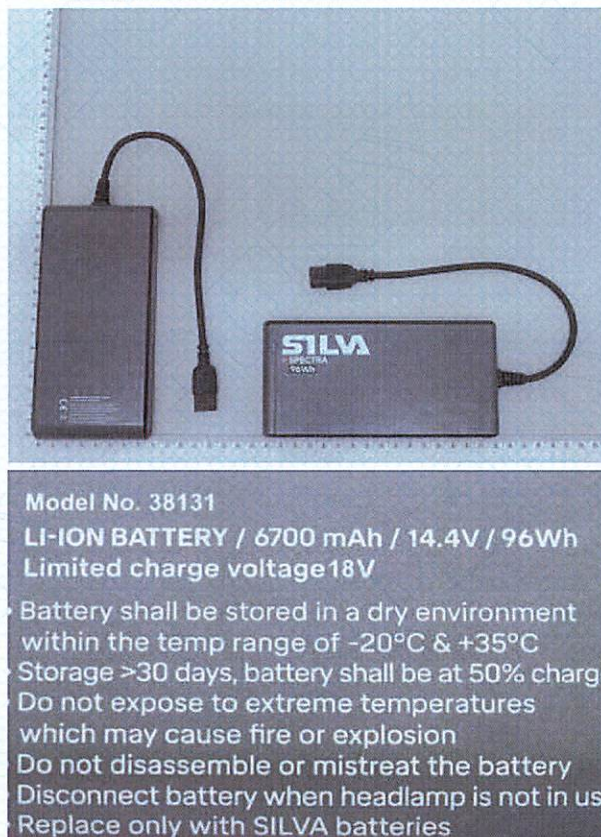

仅对原报告照片中的样品负责

Authenticate the photo on original report only



Pony Testing International Group

No. MPI0G8AL328617U5 第 4 页, 共 16 页 (Page 4 of 16)

V、测试方法 Test Method

Tests T.1 to T.5 shall be conducted in sequence on the same cell or battery. Tests T.6 and T.8 shall be conducted using not otherwise tested cells or batteries. Test T.7 may be conducted using undamaged batteries previously used in tests T.1 to T.5 for purposes of testing on cycled batteries.

小型电池或电池组必须按顺序进行试验 T.1 至 T.5。试验 T.6 和 T.8 应使用未另外试验过的电池或电池组。试验 T.7 可以使用原先在试验 T.1 至 T.5 中使用过的未损坏电池组进行, 以便测试经过充放电的电池组。

In order to quantify the mass loss, the following procedure is provided:

质量损失依照下式计算:

Mass loss 质量损失 (%) = $(M_1 - M) / M_1 \times 100$

Where M_1 is the mass before the test and M_2 is the mass after the test. When mass loss does not exceed the values in Table below, it shall be considered as “no mass loss”.

式中 M_1 是试验前的质量, M_2 是试验后的质量。如质量损失不超过下表所列数值, 即视为“无质量损失”。

Mass M_1 of cell or battery 电池或电池组质量 M_1	Mass loss limit 质量损失限值
$M_1 < 1g$	0.5%
$1g \leq M_1 \leq 75g$	0.2%
$M_1 > 75g$	0.1%

T.1 Altitude simulation 高度模拟

Test cells and batteries shall be stored at a pressure of 11.6kPa or less for at least six hours at ambient temperature ($20^\circ\text{C} \pm 5^\circ\text{C}$).

Cells and batteries meet this requirement if there is no leakage, no venting, no disassembly, no rupture and no fire and if the open circuit voltage of each test cell or battery after testing is not less than 90% of its voltage immediately prior to this procedure. The requirement relating to voltage is not applicable to test cells and batteries at fully discharged states.

试验电池和电池组应在压力等于或低于 11.6 千帕和环境温度 ($20^\circ\text{C} \pm 5^\circ\text{C}$) 下存放至少 6 小时。

要求电池和电池组无渗漏、无排气、无解体、无破裂和无起火, 并且每个试验电池或电池组在试验后的开路电压不小于其在进行这一试验前电压的 90%。有关电压的要求不适用于完全放电状态的试验电池和电池组。

PONY 谱尼测试
Pony Testing International Group

Hotline 400-819-5688 www.ponytest.com

谱尼测试集团深圳有限公司
地址: 深圳市宝安区福海街道桥头社区永和路鑫豪盛工业园 1 栋、2 栋 3 层
电话: 0755-26050909

北京实验室:(010)83055000 哈尔滨实验室:(0451)58627755 内蒙古医学实验室:(0471)3591511 武汉实验室:(027)83997127
北京医学实验室:(010)62450233-8010 黑龙江医学实验室:(0451)58603455 太原实验室:(0351)7555722 武汉医学实验室:(027)85446975
北京谱尼科技公司:(010)80415661 郑州实验室:(0371)69350670 成都实验室:(028)87702708 杭州实验室:(0571)87219096
青岛实验室:(0532)88706866 郑州谱尼医学实验室:(0371)63279066 贵州实验室:(0851)85221000 杭州医学实验室:(0571)87219096
青岛医学实验室:(0532)88706866 新疆实验室:(0991)6684186 上海实验室:(021)64851999 宁波实验室:(0574)87977185
天津实验室:(022)23607888 石家庄实验室:(0311)85376660 上海医学实验室:(021)64851999 合肥实验室:(0551)63843474
天津医学实验室:(022)23607888 西安实验室:(029)89608785 苏州实验室:(0512)62997900 深圳实验室:(0755)26050909
长春实验室:(0431)80530198 西安创尼实验室:(029)81123093 苏州汽车安全带及儿童安全座椅 碰撞实验室:(0512)62997900 深圳医学实验室:(0755)26050909
吉林医学实验室:(0431)80529700 西安查德威克实验室:(029)62886819 碰撞实验室:(0512)62997900 广州实验室:(020)89224310
大连实验室:(0411)87336618 西安医学实验室:(029)89608785 苏州医学实验室:(0512)62997900 南宁实验室:(0771)5518818
大连医学实验室:(0411)87336618 呼和浩特实验室:(0471)3450025 武汉车附所:(027)82318175 厦门实验室:(0592)5568048



Pony Testing International Group

No. MPI0G8AL328617U5 第 5 页, 共 16 页 (Page 5 of 16)

T.2 Thermal test 温度试验

Test cells and batteries are to be stored for at least six hours at a test temperature equal to $72^{\circ}\text{C} \pm 2^{\circ}\text{C}$, followed by storage for at least six hours at a test temperature equal to $-40^{\circ}\text{C} \pm 2^{\circ}\text{C}$. The maximum time interval between test temperature extremes is 30 minutes. This procedure is to be repeated until 10 total cycles are complete, after which all test cells and batteries are to be stored for 24 hours at ambient temperature ($20^{\circ}\text{C} \pm 5^{\circ}\text{C}$). For large cells and batteries the duration of exposure to the test temperature extremes should be at least 12 hours.

Cells and batteries meet this requirement if there is no leakage, no venting, no disassembly, no rupture and no fire and if the open circuit voltage of each test cell or battery after testing is not less than 90% of its voltage immediately prior to this procedure. The requirement relating to voltage is not applicable to test cells and batteries at fully discharged states.

试验电池和电池组应先在试验温度等于 $72^{\circ}\text{C} \pm 2^{\circ}\text{C}$ 的条件下存放至少 6 小时, 接着再在试验温度等于 $-40^{\circ}\text{C} \pm 2^{\circ}\text{C}$ 的条件下存放至少 6 小时。两个极端试验温度之间的最大时间间隔为 30 分钟。此程序重复进行, 共完成 10 次, 接着将所有试验电池和电池组在环境温度 ($20^{\circ}\text{C} \pm 5^{\circ}\text{C}$) 下存放 24 小时。对于大型电池和电池组, 暴露于极端试验温度的时间至少应为 12 小时。

要求电池和电池组无渗漏、无排气、无解体、无破裂和无起火, 并且每个试验电池或电池组在试验后的开路电压不小于其在进行这一试验前电压的 90%。有关电压的要求不适用于完全放电状态的试验电池和电池组。

T.3 Vibration 振动

Cells and batteries are firmly secured to the platform of the vibration machine without distorting the cells in such a manner as to faithfully transmit the vibration. The vibration shall be a sinusoidal waveform with a logarithmic sweep between 7Hz and 200Hz and back to 7Hz traversed in 15 minutes. This cycle shall be repeated 12 times for a total of 3 hours for each of three mutually perpendicular mounting positions of the cell. One of the directions of vibration must be perpendicular to the terminal face.

The logarithmic frequency sweep shall differ for cells and batteries with a gross mass of not more than 12kg (cells and small batteries), and for batteries with a gross mass of more than 12kg (large batteries).

For cells and small batteries: from 7Hz a peak acceleration of $1g_n$ is maintained until 18Hz is reached. The amplitude is then maintained at 0.8mm (1.6mm total excursion) and the frequency increased until a peak acceleration of $8g_n$ occurs (approximately 50Hz). A peak acceleration of $8g_n$ is then maintained until the frequency is increased to 200Hz.

For large batteries: from 7Hz to a peak acceleration of $1g_n$ is maintained until 18Hz is reached. The amplitude is then maintained at 0.8mm (1.6mm total excursion) and the frequency increased until a peak acceleration of $2g_n$ occurs (approximately 25Hz). A peak acceleration of $2g_n$ is then maintained until the frequency is increased to 200Hz.



Pony Testing International Group

No. MPI0G8AL328617U5 第 6 页, 共 16 页 (Page 6 of 16)

Cells and batteries meet this requirement if there is no leakage, no venting, no disassembly, no rupture and no fire during the test and after the test and if the open circuit voltage of each test cell or battery after testing in its perpendicular mounting position is not less than 90% of its voltage immediately prior to this procedure. The requirement relating to voltage is not applicable to test cells and batteries at fully discharged states.

电池和电池组紧固于振动机平台, 但不得造成电池变形, 并能准确可靠地传播振动。振动应是正弦波形, 对数扫描频率在 7 赫兹和 200 赫兹之间, 再回到 7 赫兹, 跨度为 15 分钟。这一振动过程须对三个互相垂直的电池安装方位的每一方向重复进行 12 次, 总共为时 3 小时。其中一个振动方向必须与端面垂直。

作对数式频率扫描, 对总质量不足 12 千克的电池和电池组 (电池和小型电池组), 和对 12 千克及更大的电池组 (大型电池组) 有所不同。

对电池和小型电池组: 从 7 赫兹开始, 保持 $1g_n$ 的最大加速度, 直到频率达到 18 赫兹。然后将振幅保持在 0.8 毫米 (总偏移 1.6 毫米), 并增加频率直到最大加速度达到 $8g_n$ (频率约为 50 赫兹)。将最大加速度保持在 $8g_n$ 直到频率增加到 200 赫兹。

对大型电池组: 从 7 赫兹开始, 保持 $1g_n$ 的最大加速度, 直到频率达到 18 赫兹。然后将振幅保持在 0.8 毫米 (总偏移 1.6 毫米), 并增加频率直到最大加速度达到 $2g_n$ (频率约为 25 赫兹)。将最大加速度保持在 $2g_n$ 直到频率增加到 200 赫兹。

要求电池和电池组试验中和试验后无渗漏、无排气、无解体、无破裂和无起火, 并且每个试验电池或电池组在第三个垂直安装方位上的试验后测得的开路电压不小于在进行这一试验前电压的 90%。有关电压的要求不适用于完全放电状态的试验电池和电池组。

T.4 Shock 冲击

Test cells and batteries shall be secured to the testing machine by means of a rigid mount which will support all mounting surfaces of each test battery.

Each cell shall be subjected to a half-sine shock of peak acceleration of $150g_n$ and pulse duration of 6 milliseconds. Alternatively, large cells may be subjected to a half-sine shock of peak acceleration of $50g_n$ and pulse duration of 11 milliseconds.

Each battery shall be subjected to a half-sine shock of peak acceleration depending on the mass of the battery. The pulse duration shall be 6 milliseconds for small batteries and 11 milliseconds for large batteries. The formulas below are provided to calculate the appropriate minimum peak accelerations.

试验电池和电池组用坚硬支架紧固在试验装置上, 支架支撑着每个试验电池组的所有安装面。

每个小型电池必须经受峰值加速度 $150g_n$ 和脉冲持续时间 6 毫秒的半正弦波冲击。针对大型电池必须经受最大加速度 $50g_n$ 和脉冲持续时间 11 毫秒的半正弦波冲击。

每个电池须经受的正弦波冲击的最低限度最大加速度依照下式计算。对于小型电池组的脉冲持续时间应为 6 毫秒, 对于大型电池组的脉冲持续时间应为 11 毫秒。



Battery 电池组	Minimum peak acceleration 最小峰值加速度	Pulse duration 脉冲持续时间
Small batteries 小型电池组	150g _n or result of formula 150g _n 或公式计算结果 $\text{Acceleration 加速度 (g}_n\text{)} = \sqrt{\frac{100850}{\text{mass / 质量 *}}}$ Whichever is smaller 中的较小值	6ms
Large batteries 大型电池组	50g _n or result of formula 50g _n 或公式计算结果 $\text{Acceleration 加速度 (g}_n\text{)} = \sqrt{\frac{30000}{\text{mass / 质量 *}}}$ Whichever is smaller 中的较小值	11ms

* Mass is expressed in kilograms /质量单位用千克计算

Each cell or battery shall be subjected to three shocks in the positive direction and to three shocks in the negative direction in each of three mutually perpendicular mounting positions of the cell or battery for a total of 18 shocks.

Cells and batteries meet this requirement if there is no leakage, no venting, no disassembly, no rupture and no fire and if the open circuit voltage of each test cell or battery after testing is not less than 90% of its voltage immediately prior to this procedure. The requirement relating to voltage is not applicable to test cells and batteries at fully discharged states.

每个电池或电池组须在三个互相垂直的安装方位的正方向经受三次冲击,接着在反方向经受三次冲击,总共经受18次冲击。

要求电池和电池组无渗漏、无排气、无解体、无破裂和无起火,并且每个试验电池或电池组在试验后的开路电压不小于其在进行这一试验前电压的90%。有关电压的要求不适用于完全放电状态的试验电池和电池组。



Pony Testing International Group

No. MPI0G8AL328617U5 第 8 页, 共 16 页 (Page 8 of 16)

T.5 External short circuit 外部短路

The cell or battery to be tested shall be heated for a period of time necessary to reach a homogeneous stabilized temperature of $57^{\circ}\text{C} \pm 4^{\circ}\text{C}$, measured on the external case. This period of time depends on the size and design of the cell or battery and should be assessed and documented. If this assessment is not feasible, the exposure time shall be at least 6 hours for small cells and small batteries, and 12 hours for large cells and large batteries. Then the cell or battery at $57^{\circ}\text{C} \pm 4^{\circ}\text{C}$ shall be subjected to one short circuit condition with a total external resistance of less than 0.1 ohm. This short circuit condition is continued for at least one hour after the cell or battery external case temperature has returned to $57^{\circ}\text{C} \pm 4^{\circ}\text{C}$, or in the case of the large batteries, has decreased by half of the maximum temperature increase observed during the test and remains below that value. The short circuit and cooling down phases shall be conducted at least at ambient temperature.

Cells and batteries meet this requirement if their external temperature does not exceed 170°C and there is no disassembly, no rupture and no fire during the test and within six hours after the test.

待测试的电池或电池组应加热一段必要时间, 以从外壳测量的温度达到均匀稳定的 $57^{\circ}\text{C} \pm 4^{\circ}\text{C}$ 的温度, 应对加热持续时间进行评估和记录; 如果这种评估不可行, 对于小型电池和小型电池组至少在 $57 \pm 4^{\circ}\text{C}$ 的环境下存放 6 小时, 对于大型电池和大型电池组至少在 $57^{\circ}\text{C} \pm 4^{\circ}\text{C}$ 的环境下存放 12 小时。然后, 电池或电池组在 $57^{\circ}\text{C} \pm 4^{\circ}\text{C}$ 的环境中, 应接受一个外部总电阻小于 0.1 欧姆的短路条件。这一短路条件应在电池或电池组外壳温度回到 $57^{\circ}\text{C} \pm 4^{\circ}\text{C}$ 后继续至少 1 小时, 或对于大型电池组其外壳温度降幅达试验中观察到最高温升幅的二分之一, 并保持低于该值。进行短路和降温阶段试验的温度至少相当于环境温度。

要求电池和电池组外壳温度不超过 170°C , 并且在试验过程中及试验后 6 小时内无解体、无破裂、无起火。

T.6 Impact 撞击

Impact (applicable to cylindrical cells not less than 18 mm in diameter)

The test sample cell or component cell is to be placed on a flat smooth surface. A $15.8 \pm 0.1\text{mm}$ diameter, at least 6 cm long, or the longest dimension of the cell, whichever is greater, Type 316 stainless steel bar is to be placed across the centre of the sample. A $9.1\text{kg} \pm 0.1\text{kg}$ mass is to be dropped from a height of $61 \pm 2.5\text{cm}$ at the intersection of the bar and sample in a controlled manner using a near frictionless, vertical sliding track or channel with minimal drag on the falling mass. The vertical track or channel used to guide the falling mass shall be oriented 90 degrees from the horizontal supporting surface.

The test sample is to be impacted with its longitudinal axis parallel to the flat surface and perpendicular to the longitudinal axis of the $15.8 \text{ mm} \pm 0.1\text{mm}$ diameter curved surface lying across the centre of the test sample. Each sample is to be subjected to only a single impact.



撞击 (适用于直径不小于 18 毫米的圆柱形电池)

试样电池或元件电池放在平坦光滑的表面上, 一根 316 型不锈钢棒横放在试样中心, 钢棒直径 15.8 毫米 \pm 0.1 毫米, 长度至少 6 厘米, 或电池最长端的尺度, 取二者之长者。将一块 9.1 千克 \pm 0.1 千克的重锤从 61 厘米 \pm 2.5 厘米高处跌落到钢棒和试样交叉处, 使用一个几乎没有摩擦的、对落体重锤阻力最小的垂直轨道或管道加以控制。垂直轨道或管道用于引导落锤沿与水平支撑表面呈 90 度落下。

接受撞击的试样, 纵轴应与平坦表面平行并与横放在试样中心的直径 15.8 \pm 0.1 毫米弯曲表面的纵轴垂直。每一试样只经受一次撞击。

T.7 Overcharge 过度充电

The charge current shall be twice the manufacturer's recommended maximum continuous charge current. The minimum voltage of the test shall be as follows:

(a) When the manufacturer's recommended charge voltage is not more than 18V, the minimum voltage of the test shall be the lesser of two times the maximum charge voltage of the battery or 22V.

(b) When the manufacturer's recommended charge voltage is more than 18V, the minimum voltage of the test shall be 1.2 times the maximum charge voltage.

Tests are to be conducted at ambient temperature; the duration of the test shall be 24 hours.

Rechargeable batteries meet this requirement if there is no disassembly and no fire during the test and within seven days after the test.

充电电流必须是制造商建议的最大持续充电电流的两倍。试验的最小电压如下:

(a) 制造商建议的充电电压不大于 18 伏时, 试验的最小电压应是电池组最大充电电压的两倍或 22 伏两者中的较小者;

(b) 制造商建议的充电电压大于 18 伏时, 试验的最小电压应为最大充电电压的 1.2 倍。

试验应在环境温度下进行, 进行试验的时间应为 24 小时。

要求充电电池组在试验过程中和试验后 7 天内无解体, 无起火。

T.8 Forced discharge 强制放电

Each cell shall be forced discharged at ambient temperature by connecting it in series with a 12V D.C. power supply at an initial current equal to the maximum discharge current specified by the manufacturer.

The specified discharge current is to be obtained by connecting a resistive load of the appropriate size and rating in series with the test cell. Each cell shall be forced discharged for a time interval (in hours) equal to its rated capacity divided by the initial test current (in ampere).



Pony Testing International Group

No. MPI0G8AL328617U5 第 10 页, 共 16 页 (Page 10 of 16)

Primary or rechargeable cells meet this requirement if there is no disassembly and no fire during the test and within seven days after the test.

每个电池应在环境温度下与 12 伏直流电电源串联在起始电流等于制造商给定的最大放电电流的条件下强制放电。

将适当大小和额定值的电阻负荷与试验电池串联, 计算得出给定的放电电流。对每个电池进行强制放电, 放电时间 (小时) 应等于其额定容量除以初始试验电流 (安培)。

要求原电池或充电电池在试验过程中和试验后 7 天内无解体, 无起火。

PONY 谱尼测试
Pony Testing International Group

Hotline 400-819-5688

www.ponytest.com

谱尼测试集团深圳有限公司

地址: 深圳市宝安区福海街道桥头社区永和路鑫泰盛工业园 1 栋、2 栋 3 层

电话: 0755-26050909


北京实验室:(010)83055000	哈尔滨实验室:(0451)58627755	内蒙古医学实验室:(0471)3591511	武汉实验室:(027)83997127
北京医学实验室:(010)62450233-8010	黑龙江医学实验室:(0451)58603455	太原实验室:(0351)7555722	武汉医学实验室:(027)85446975
北京谱尼科技公司:(010)80415661	郑州实验室:(0371)69350670	成都实验室:(028)87702708	杭州实验室:(0571)87219096
青岛实验室:(0532)88706866	郑州湖医医学实验室:(0371)63279066	贵州实验室:(0851)85221000	杭州医学实验室:(0571)87219096
青岛医学实验室:(0532)88706866	新疆实验室:(0991)6684186	上海实验室:(021)64851999	宁波实验室:(0574)87977185
天津实验室:(022)23607888	石家庄实验室:(0311)85376660	上海医学实验室:(021)64851999	合肥实验室:(0551)63843474
天津医学实验室:(022)23607888	西安实验室:(029)89608785	苏州实验室:(0512)62997900	深圳实验室:(0755)26050909
长春实验室:(0431)80530198	西安创尼实验室:(029)81123093	苏州汽车安全带及儿童安全座椅	深圳医学实验室:(0755)26050909
吉林医学实验室:(0431)80529700	西安查德威克实验室:(029)62886819	碰撞实验室:(0512)62997900	广州实验室:(020)89224310
大连实验室:(0411)87336618	西安医学实验室:(029)89608785	苏州医学实验室:(0512)62997900	南宁实验室:(0771)5518818
大连医学实验室:(0411)87336618	呼和浩特实验室:(0471)3450025	武汉车附所:(027)82318175	厦门实验室:(0592)5568048



Pony Testing International Group

No. MPI0G8AL328617U5 第 11 页, 共 16 页 (Page 11 of 16)

VI、测试程序 Test Procedure

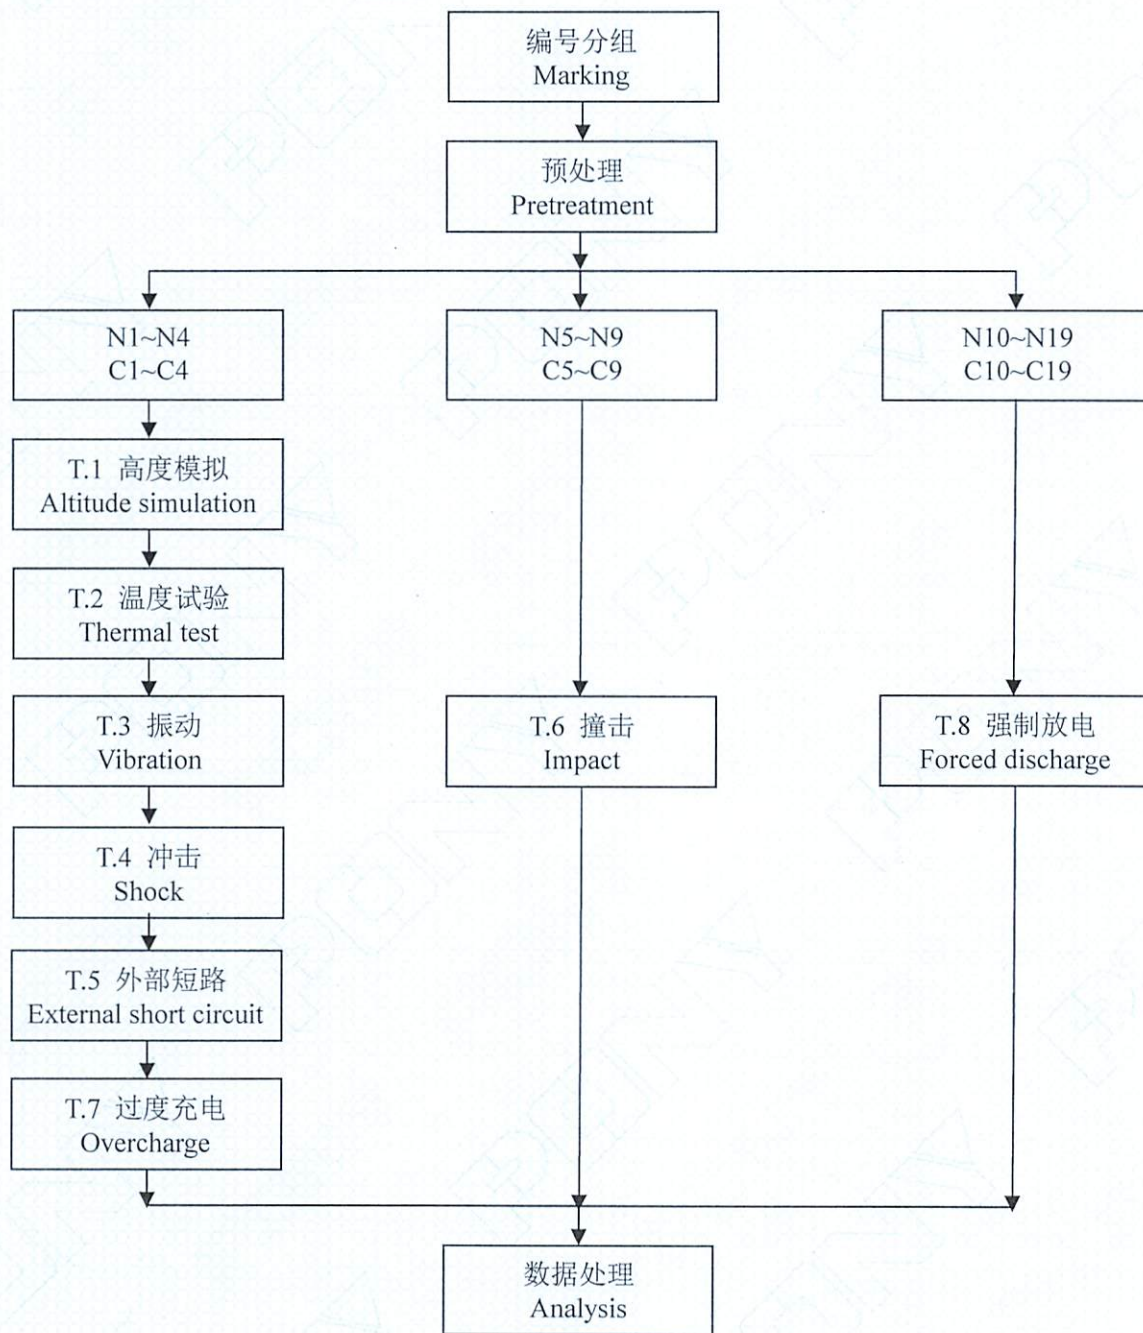

PONY 谱尼测试
Pony Testing International Group

©Hotline 400-819-5688

www.ponytest.com

谱尼测试集团深圳有限公司
地址：深圳市宝安区福海街道桥头社区永和路鑫泰盛工业园1栋、2栋3层
电话：0755-26050909

北京实验室:(010)83055000	哈尔滨实验室:(0451)58627755	内蒙古医学实验室:(0471)3591511	武汉实验室:(027)83997127
北京医学实验室:(010)62450233-8010	黑龙江医学实验室:(0451)58603455	太原实验室:(0351)7555722	武汉医学实验室:(027)85446975
北京谱尼科技公司:(010)80415661	郑州实验室:(0371)69350670	成都实验室:(028)87702708	杭州实验室:(0571)87219096
青岛实验室:(0532)88706866	郑州谱尼医学实验室:(0371)63279066	贵州实验室:(0851)85221000	杭州医学实验室:(0571)87219096
青岛医学实验室:(0532)88706866	新疆实验室:(0991)6684186	上海实验室:(021)64851999	宁波实验室:(0574)87977185
天津实验室:(022)23607888	石家庄实验室:(0311)85376660	上海医学实验室:(021)64851999	合肥实验室:(0551)63843474
天津医学实验室:(022)23607888	西安实验室:(029)89608785	苏州实验室:(0512)62997900	深圳实验室:(0755)26050909
长春实验室:(0431)80530198	西安创尼实验室:(029)81123093	苏州汽车安全带及儿童安全座椅	深圳医学实验室:(0755)26050909
吉林医学实验室:(0431)80529700	西安查德威克实验室:(029)62886819	碰撞实验室:(0512)62997900	广州实验室:(020)89224310
大连实验室:(0411)87336618	西安医学实验室:(029)89608785	苏州医学实验室:(0512)62997900	南宁实验室:(0771)5518818
大连医学实验室:(0411)87336618	呼和浩特实验室:(0471)3450025	武汉车管所:(027)82318175	厦门实验室:(0592)5568048



Pony Testing International Group

No. MPI0G8AL328617U5 第 12 页, 共 16 页 (Page 12 of 16)

VII、测试设备 Test Apparatus

IE-0121	高精度电池测试系统	High precision battery test system
IE-0513	高精度电池测试仪	High precision battery test instrument
IE-0434	真空干燥箱	Vacuum drying oven
IE-0090	万用表	Multimeter
IE-0824	高原空盒气压表	Tableland air pressure gauge
IE-0259	电子天平	Electronic balance
IE-0219	快速温变箱	Rapid temperature change test chamber
IE-0128	电动振动试验系统	Electric vibration test system
IE-0664	气动垂直冲击试验台	Pneumatic vertical impact testing platform
IE-0281	温控短路试验机	Temperature controlled short circuit testing machine
IE-0185	数字温度表(电热偶)	The digital thermometer (TC)
IE-0568	多功能数字式毫欧计	Multi-function digital milliohm meter
IE-0833	电池重物冲击试验机	Battery heavy shock testing machine
IE-0511	可编程直流电源	Programmable DC power source

PONY 谱尼测试
Pony Testing International Group

Hotline 400-819-5688 www.ponytest.com

谱尼测试集团深圳有限公司
地址: 深圳市宝安区福海街道桥头社区永和路鑫豪盛工业园 1 栋、2 栋 3 层
电话: 0755-26050909

北京实验室:(010)83055000	哈尔滨实验室:(0451)58627755	内蒙古医学实验室:(0471)3591511	武汉实验室:(027)83997127
北京医学实验室:(010)62450233-8010	黑龙江医学实验室:(0451)58603455	太原实验室:(0351)7555722	武汉医学实验室:(027)85446975
北京谱尼科技公司:(010)80415661	郑州实验室:(0371)69350670	成都实验室:(028)87702708	杭州实验室:(0571)87219096
青岛实验室:(0532)88706866	郑州谱尼医学实验室:(0371)63279066	贵州实验室:(0851)85221000	杭州医学实验室:(0571)87219096
青岛医学实验室:(0532)88706866	新疆实验室:(0991)6684186	上海实验室:(021)64851999	宁波实验室:(0574)87977185
天津实验室:(022)23607888	石家庄实验室:(0311)85376660	上海医学实验室:(021)64851999	合肥实验室:(0551)63843474
天津医学实验室:(022)23607888	西安实验室:(029)89608785	苏州实验室:(0512)62997900	深圳实验室:(0755)26050909
长春实验室:(0431)80530198	西安创尼实验室:(029)81123093	苏州汽车安全带及儿童安全座椅	深圳医学实验室:(0755)26050909
吉林医学实验室:(0431)80529700	西安德成实验室:(029)62886819	碰撞实验室:(0512)62997900	广州实验室:(020)89224310
大连实验室:(0411)87336618	西安医学实验室:(029)89608785	苏州医学实验室:(0512)62997900	南宁实验室:(0771)5518818
大连医学实验室:(0411)87336618	呼和浩特实验室:(0471)3450025	武汉车附所:(027)82318175	厦门实验室:(0592)5568048



Pony Testing International Group

No. MPI0G8AL328617U5 第 13 页, 共 16 页 (Page 13 of 16)

VIII、测试数据 Test Data

T.1 高度模拟 Altitude simulation

编号 No.	测试前 Pre-test		测试后 After test		质量亏损 Mass loss (%)	电压亏损 Voltage loss (%)	有无泄露, 排气, 解体, 破裂和起火 Whether leakage, venting, disassembly, rupture, fire (Yes/No)
	质量 Mass (g)	电压 Voltage (V)	质量 Mass (g)	电压 Voltage (V)			
N1	514.026	16.67	513.996	16.65	0.006	0.120	无 (No)
N2	513.812	16.66	513.781	16.66	0.006	0.000	无 (No)
N3	513.794	16.67	513.758	16.67	0.007	0.000	无 (No)
N4	513.779	16.65	513.742	16.65	0.007	0.000	无 (No)
C1	515.752	16.67	515.721	16.66	0.006	0.060	无 (No)
C2	514.053	16.67	514.020	16.67	0.006	0.000	无 (No)
C3	513.384	16.65	513.352	16.65	0.006	0.000	无 (No)
C4	513.696	16.64	513.647	16.63	0.010	0.060	无 (No)

T.2 温度试验 Thermal test

编号 No.	测试前 Pre-test		测试后 After test		质量亏损 Mass loss (%)	电压亏损 Voltage loss (%)	有无泄露, 排气, 解体, 破裂和起火 Whether leakage, venting, disassembly, rupture, fire (Yes/No)
	质量 Mass (g)	电压 Voltage (V)	质量 Mass (g)	电压 Voltage (V)			
N1	513.996	16.65	513.847	16.55	0.029	0.601	无 (No)
N2	513.781	16.66	513.627	16.54	0.030	0.720	无 (No)
N3	513.758	16.67	513.611	16.58	0.029	0.540	无 (No)
N4	513.742	16.65	513.589	16.55	0.030	0.601	无 (No)
C1	515.721	16.66	515.583	16.53	0.027	0.780	无 (No)
C2	514.020	16.67	513.873	16.53	0.029	0.840	无 (No)
C3	513.352	16.65	513.203	16.54	0.029	0.661	无 (No)
C4	513.647	16.63	513.498	16.50	0.029	0.782	无 (No)

PONY 谱尼测试
Pony Testing International Group

Hotline 400-819-5688 www.ponytest.com

谱尼测试集团深圳有限公司
地址: 深圳市宝安区福海街道桥头社区永和路鑫泰盛工业园 1 栋, 2 栋 3 层
电话: 0755-26050909

北京实验室: (010)83055000 哈尔滨实验室: (0451)58627755 内蒙古医学实验室: (0471)3591511 武汉实验室: (027)83997127
北京医学实验室: (010)62450233-8010 黑龙江医学实验室: (0451)58603455 太原实验室: (0351)7555722 武汉医学实验室: (027)85446975
北京谱尼科技公司: (010)80415661 郑州实验室: (0371)69350670 成都实验室: (028)87702708 杭州实验室: (0571)87219096
青岛实验室: (0532)88706866 郑州谱尼医学实验室: (0371)6329066 贵州实验室: (0851)85221000 杭州医学实验室: (0571)87219096
青岛医学实验室: (0532)88706866 新疆实验室: (0991)6684186 上海实验室: (021)64851999 宁波实验室: (0574)87977185
天津实验室: (022)23607888 石家庄实验室: (0311)85376660 上海医学实验室: (021)64851999 合肥实验室: (0551)63843474
天津医学实验室: (022)23607888 西安实验室: (029)89608785 苏州实验室: (0512)62997900 深圳实验室: (0755)26050909
长春实验室: (0431)80530198 西安创尼实验室: (029)81123093 苏州汽车安全带及儿童安全座椅碰撞实验室: (0512)62997900 深圳医学实验室: (0755)26050909
吉林医学实验室: (0431)80529700 西安德威实验室: (029)62886819 西安医学实验室: (029)89608785 广州实验室: (020)89224310
大连实验室: (0411)87336618 西安医学实验室: (029)89608785 武汉车附所: (027)82318175 南宁实验室: (0771)5518818
大连医学实验室: (0411)87336618 呼和浩特实验室: (0471)3450025 厦门实验室: (0592)5568048



Pony Testing International Group

T.3 振动 Vibration

编号 No.	测试前 Pre-test		测试后 After test		质量亏损 Mass loss (%)	电压亏损 Voltage loss (%)	有无泄露, 排气, 解体, 破裂和起火 Whether leakage, venting, disassembly, rupture, fire (Yes/No)
	质量 Mass (g)	电压 Voltage (V)	质量 Mass (g)	电压 Voltage (V)			
N1	513.847	16.55	513.845	16.55	0.000	0.000	无 (No)
N2	513.627	16.54	513.627	16.54	0.000	0.000	无 (No)
N3	513.611	16.58	513.611	16.57	0.000	0.060	无 (No)
N4	513.589	16.55	513.589	16.55	0.000	0.000	无 (No)
C1	515.583	16.53	515.583	16.53	0.000	0.000	无 (No)
C2	513.873	16.53	513.871	16.53	0.000	0.000	无 (No)
C3	513.203	16.54	513.203	16.53	0.000	0.060	无 (No)
C4	513.498	16.50	513.498	16.50	0.000	0.000	无 (No)

T.4 冲击 Shock

编号 No.	测试前 Pre-test		测试后 After test		质量亏损 Mass loss (%)	电压亏损 Voltage loss (%)	有无泄露, 排气, 解体, 破裂和起火 Whether leakage, venting, disassembly, rupture, fire (Yes/No)
	质量 Mass (g)	电压 Voltage (V)	质量 Mass (g)	电压 Voltage (V)			
N1	513.845	16.55	513.845	16.54	0.000	0.060	无 (No)
N2	513.627	16.54	513.627	16.54	0.000	0.000	无 (No)
N3	513.611	16.57	513.611	16.57	0.000	0.000	无 (No)
N4	513.589	16.55	513.589	16.55	0.000	0.000	无 (No)
C1	515.583	16.53	515.583	16.53	0.000	0.000	无 (No)
C2	513.871	16.53	513.871	16.53	0.000	0.000	无 (No)
C3	513.203	16.53	513.203	16.53	0.000	0.000	无 (No)
C4	513.498	16.50	513.498	16.50	0.000	0.000	无 (No)



T.5 外部短路 External short circuit

编号 No.	最高温度 Peak temperature (°C)	有无解体, 破裂, 起火 Whether disassembly, rupture, fire (Yes/No)
N1	57.3	无 (No)
N2	57.2	无 (No)
N3	57.4	无 (No)
N4	57.4	无 (No)
C1	57.5	无 (No)
C2	57.2	无 (No)
C3	57.2	无 (No)
C4	57.3	无 (No)

T.6 撞击 Impact

编号 No.	测试前电压 Pre-test Voltage (V)	最高温度 Peak temperature (°C)	有无解体, 起火 Whether disassembly, fire (Yes/No)
N5	3.716	114.8	无 (No)
N6	3.718	116.2	无 (No)
N7	3.718	119.7	无 (No)
N8	3.714	117.2	无 (No)
N9	3.718	115.3	无 (No)
C5	3.717	115.5	无 (No)
C6	3.714	120.1	无 (No)
C7	3.716	114.7	无 (No)
C8	3.715	119.8	无 (No)
C9	3.716	114.6	无 (No)



集团微信订阅号 集团微信服务号



Pony Testing International Group

No. MPI0G8AL328617U5 第 16 页, 共 16 页 (Page 16 of 16)

T.7 过度充电 Overcharge

编号 No.	测试前电压 Pre-test Voltage (V)	有无解体, 起火 Whether disassembly, fire (Yes/No)
N1	16.66	无 (No)
N2	16.65	无 (No)
N3	16.66	无 (No)
N4	16.67	无 (No)
C1	16.65	无 (No)
C2	16.66	无 (No)
C3	16.67	无 (No)
C4	16.65	无 (No)

T.8 强制放电 Forced discharge

编号 No.	测试前电压 Pre-test Voltage (V)	有无解体, 起火 Whether disassembly, fire (Yes/No)
N10	3.049	无 (No)
N11	3.047	无 (No)
N12	3.051	无 (No)
N13	3.046	无 (No)
N14	3.050	无 (No)
N15	3.049	无 (No)
N16	3.051	无 (No)
N17	3.052	无 (No)
N18	3.048	无 (No)
N19	3.049	无 (No)
C10	3.051	无 (No)
C11	3.049	无 (No)
C12	3.051	无 (No)
C13	3.049	无 (No)
C14	3.049	无 (No)
C15	3.051	无 (No)
C16	3.049	无 (No)
C17	3.055	无 (No)
C18	3.048	无 (No)
C19	3.048	无 (No)

报告结束 End of report

PONY 谱尼测试
Pony Testing International Group

Hotline 400-819-5688

www.ponytest.com

谱尼测试集团深圳有限公司
地址: 深圳市宝安区福海街道桥头社区永和路鑫豪盛工业园 1 栋、2 栋 3 层
电话: 0755-26050909

北京实验室:(010)83055000 哈尔滨实验室:(0451)58627755 内蒙古医学实验室:(0471)3591511 武汉实验室:(027)83997127
北京医学实验室:(010)62450233-8010 黑龙江医学实验室:(0451)58603455 太原实验室:(0351)7555722 武汉医学实验室:(027)85446975
北京谱尼科技公司:(010)80415661 郑州实验室:(0371)69350670 成都实验室:(028)87702708 杭州实验室:(0571)87219096
青岛实验室:(0532)88706866 郑州谱尼医学实验室:(0371)63279066 贵州实验室:(0851)85221000 杭州医学实验室:(0571)87219096
青岛医学实验室:(0532)88706866 新疆实验室:(0991)6684186 上海实验室:(021)64851999 宁波实验室:(0574)87977185
天津实验室:(022)23607888 石家庄实验室:(0311)85376660 上海医学实验室:(021)64851999 合肥实验室:(0551)63843474
天津医学实验室:(022)23607888 西安实验室:(029)89608785 苏州实验室:(0512)62997900 深圳实验室:(0755)26050909
长春实验室:(0431)80530198 西安创尼实验室:(029)81123093 苏州汽车安全带及儿童安全座椅 碰撞实验室:(0512)62997900 深圳医学实验室:(0755)26050909
吉林医学实验室:(0431)80529700 西安德威克实验室:(029)62886819 碰撞实验室:(0512)62997900 广州实验室:(020)89224310
大连实验室:(0411)87336618 西安医学实验室:(029)89608785 苏州医学实验室:(0512)62997900 南宁实验室:(0771)5518818
大连医学实验室:(0411)87336618 呼和浩特实验室:(0471)3450025 武汉车附所:(027)82318175 厦门实验室:(0592)5568048